
MODEL 163.136 /154 /172 #A up to 145272

1	*Striker eye*
2-7	*Screws*
8-9	*Stop buffer*
10	*Glove compartment*
E13/1	*Glove compartment lamp*

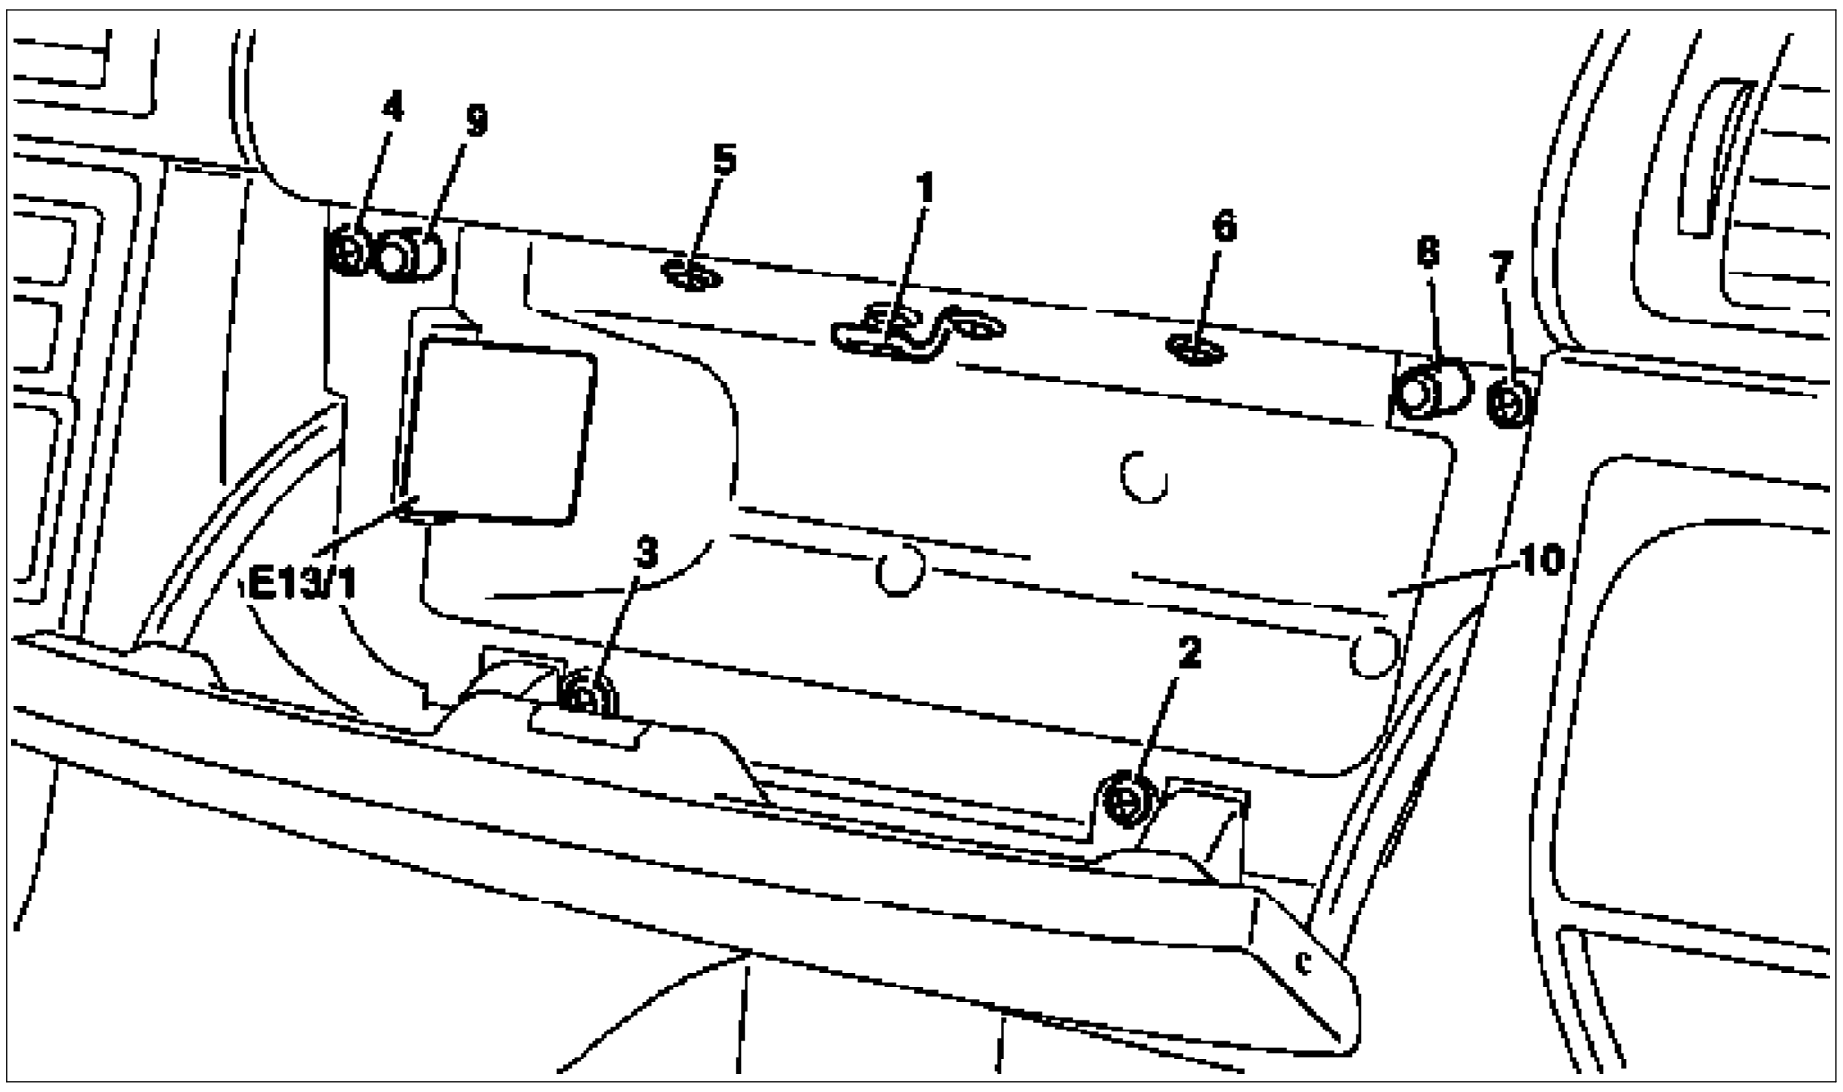

P68.10-0515-05

	Remove/Install		
1	Open glove compartment lid		
2	Unclip glove compartment lamp (E13/1) and disconnect connector		
3	Remove striker eye (1)	**Installation:** Check adjustment.Refer to:# Adjust glove compartment lid.	AR68.10-P-1300GH
4	Unscrew screws (2-7)		
5	Pry glove compartment (10) out of arrest at bottom and pull out		
6	Install in the reverse order		